# Hand Double Wheel Lens Edger



User's Manual

#### Dear user:

Thank you for purchase of CP-20 Hand Double Wheel Lens Edger.

Its really a good and correct choice! Please take time to read our user's manual carefully before use, which guarantees you to make full use of this unit and prolong its operation life.


### [Safety Precautions]

- 1. Don't use this machine for any other purposes except hand-grinding the edge of lenses;
- 2. While the machine is working ,don't touch the turning grinding wheel to avoid getting injured;
- 3. Don't use this machine when the power requirements (voltage and frequency) are not met, you should be clear about the actual working power supply;
- 4. Don't install other parts at will except the original parts of this machine:
- 5. Don't make the machine over-loaded or ram any of its spare parts.
- 6. If the machine is left idle for a period of time please remove the plug out of the wall socket.

# [Unwrapping And Operation]

- 1. Open the carton and take out of the foamed plastic cover. Then take the machine out carefully and place it on a big enough and quite stable desk.
- 2. Connect the hose, open the water valve and adjust it, turn on the motor switch, then you can use it.
- 3. This machine has two grinding wheel: 1the left is coarse grinding wheel(180#); 2the right is V-fine grinding wheel(320#). You can select the different grinding wheel according to your requirements.

### [Name Of Parts]

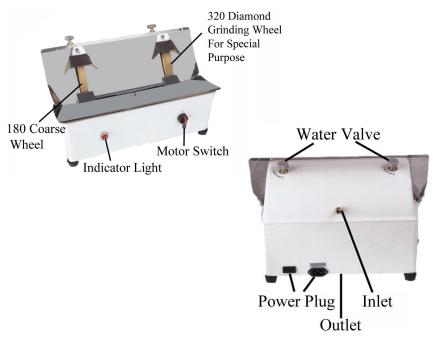

## [Simple Troubleshooting]

Problem	Solution
1.Motor doesn't rotate and the indicator light doesn't light.	Check the power supply and see if the plug is connected with the socket and the voltage is stable, check the indicator light and see if it's useful.
2.No water supply.	Check the water valve and see if it's opened.
3. Water supply is available, but no water from the exhaust hose.	Open the machine, clear the waste thorough.
4.Grinding fatigue.	Use the oilstone stick to condition the wheel reqularly.