

## **2.5 SUSPENSION SPRING RPELOAD ADJUSTMENT★**

Operator weight and vehicle loading affect suspension spring preload requirements. Adjust as necessary.

### **FRONT SUSPENSION**

Compress and release front suspension. Damping should be smooth throughout the range of travel.

Check all front suspension components for wear or damage.

Inspect from strut cartridges for leakage. Shock spring preload can not be adjusted, replace if necessary.

### **REAR SUSPENSION**

Compress and release rear suspension. Damping should be smooth throughout the range of travel. Check all rear suspension components for wear or damage.

Inspect shock for leakage

Shock spring preload can be adjusted using the shock spanner wrench.

★This design is not available for all tpye.

