

1.Control Function控制端口:

F/R-- Connect GND=CW disconnect=CCW; 接GND=顺时针运转; 悬空=逆时针运转.

EN--Connect GND=Stop disconnect=Run; 接GND=停机;悬空=运转.

SV--0~5V or PWM; 0-5V调速电压或PWM信号.

FG--Motor Speed Pulse; 电机转速脉冲输出,配东莱公司1对极电机时 1Hz=60r/min.

2.Control wires and hall sensor wires can not twist with motor phase wires.

注意控制信号线和霍尔线不能与电机线缠绕在一起; 否则引起信号干扰, 线长超过500mm需要加屏蔽.

3.Operate Voltage: 9-29VDC. 工作电压范围: 9-29VDC.正负极不能接反, 否则损毁.

4.Continuous Current-3A; Peak Current-6A; 连续可工作电流-3A;峰值瞬间电流: 6A

5.Power Supplier output current>Rated motor curent. 直流电源的输出电流>电机的额定负载电流

7.Motor Starting time-2s; 电机启动到全速-2秒钟.

8.Hall Sensor Effect Angle-60degree; 霍尔电角度-60度.

9.Total Weight-15g; 总重量-15g.

