



# INSTALLATION INSTRUCTIONS

## OPENING CEREMONY



### STEPPER MOTOR MOVEMENT

HIGH QUALITY LED BACKLIGHT



#### VOLTAGE GAUGE

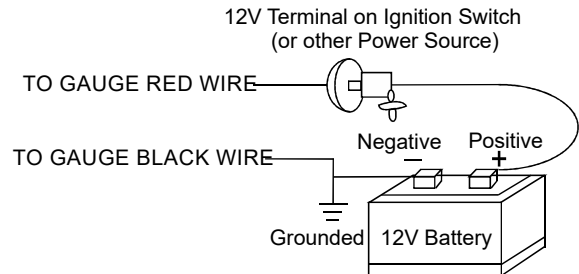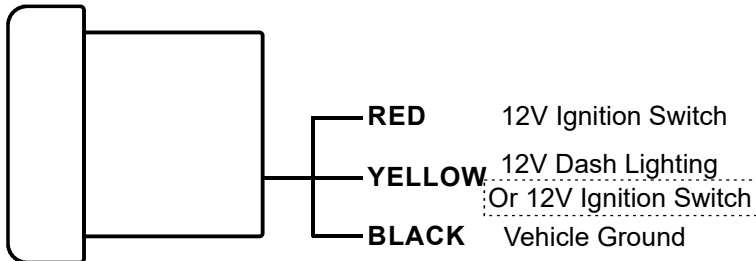



#### WATER TEMP GAUGE

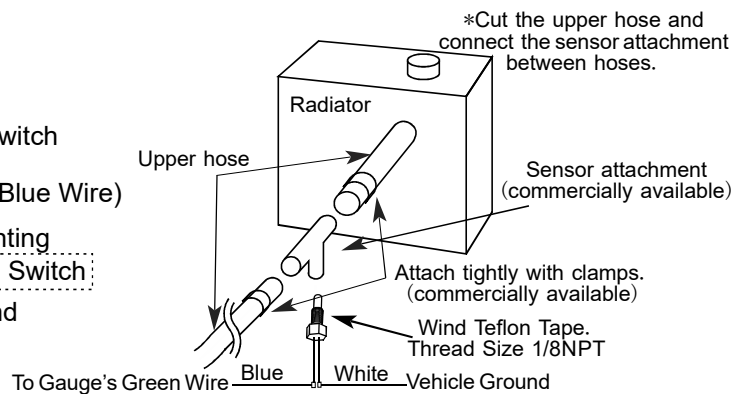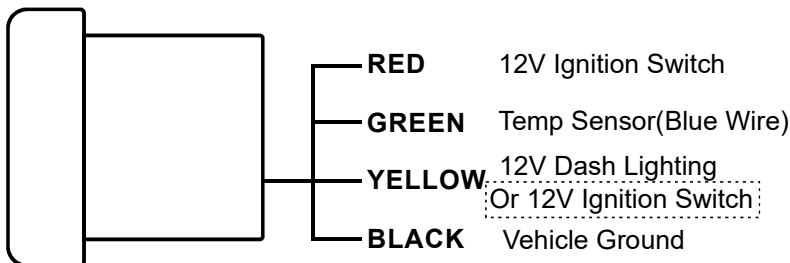


#### OIL TEMP/OIL PRESSUER GAUGE

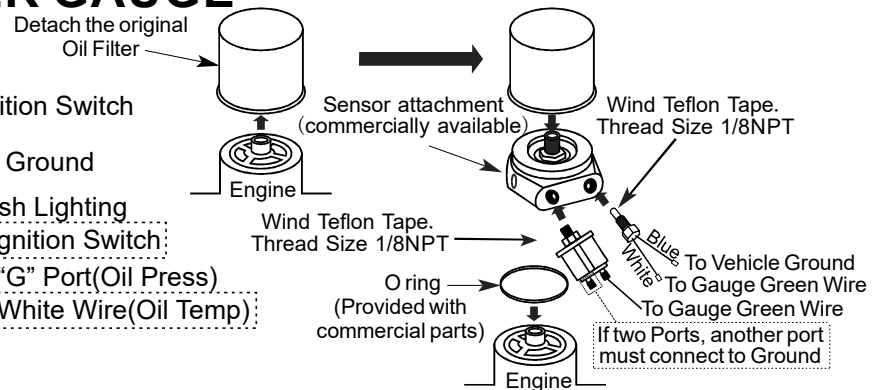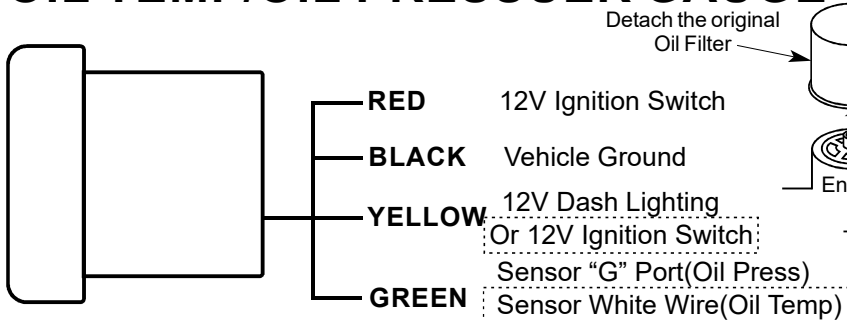


#### FUEL PRESSUER GAUGE

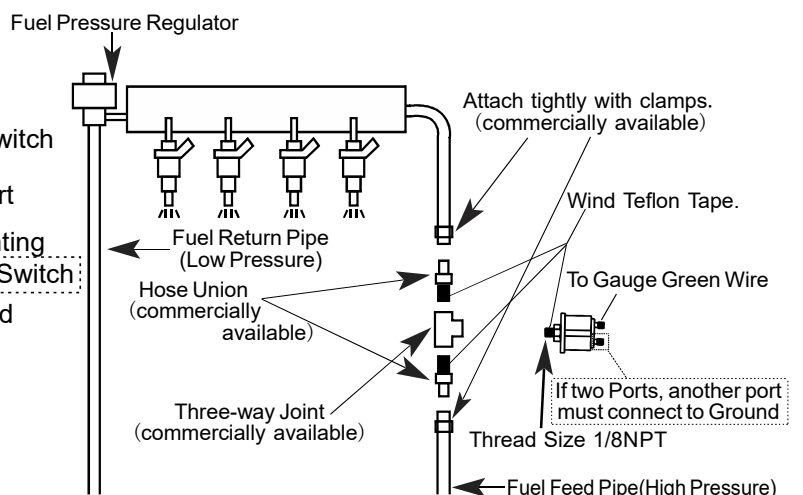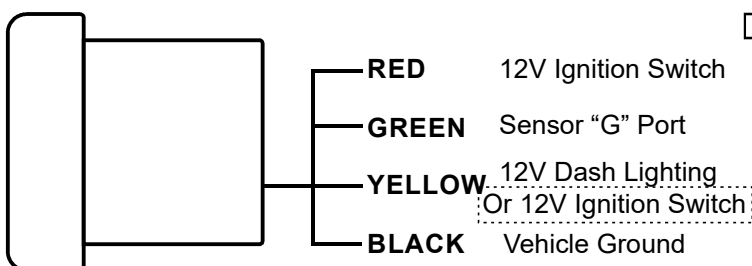


## BOOST/VACUUM GAUGE(Electronic)

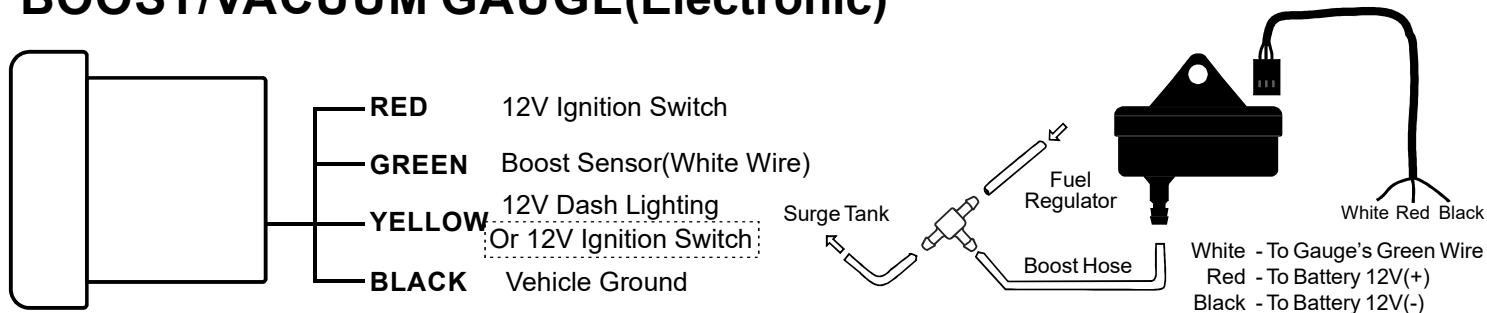


## BOOST/VACUUM GAUGE(Mechanical)

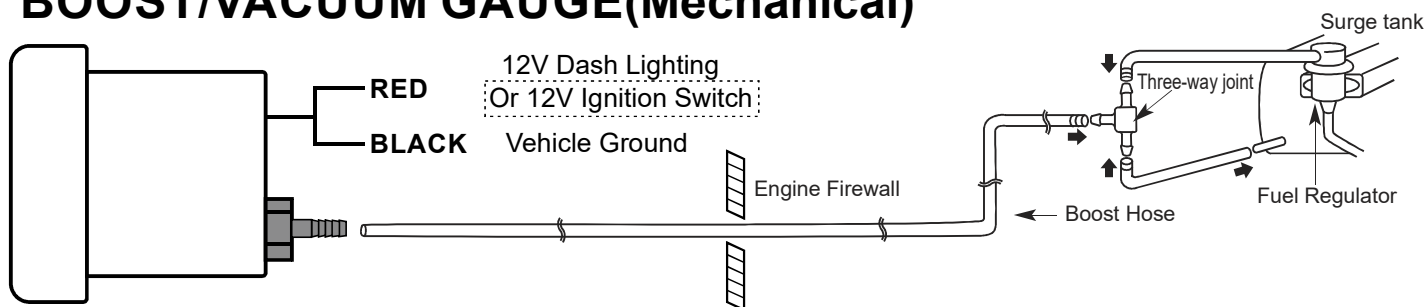


## EXHAUST GAS TEMPERATURE GAUGE

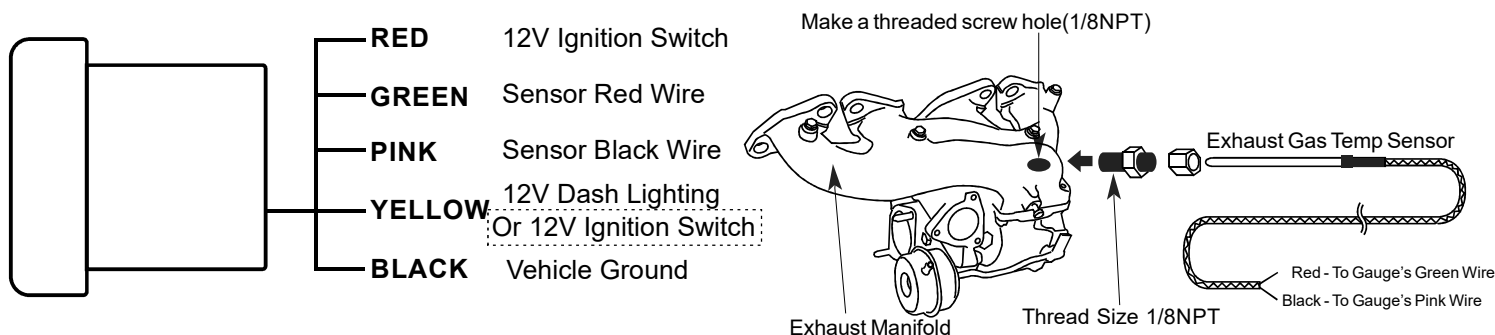

## AIR/FUEL RATIO GAUGE

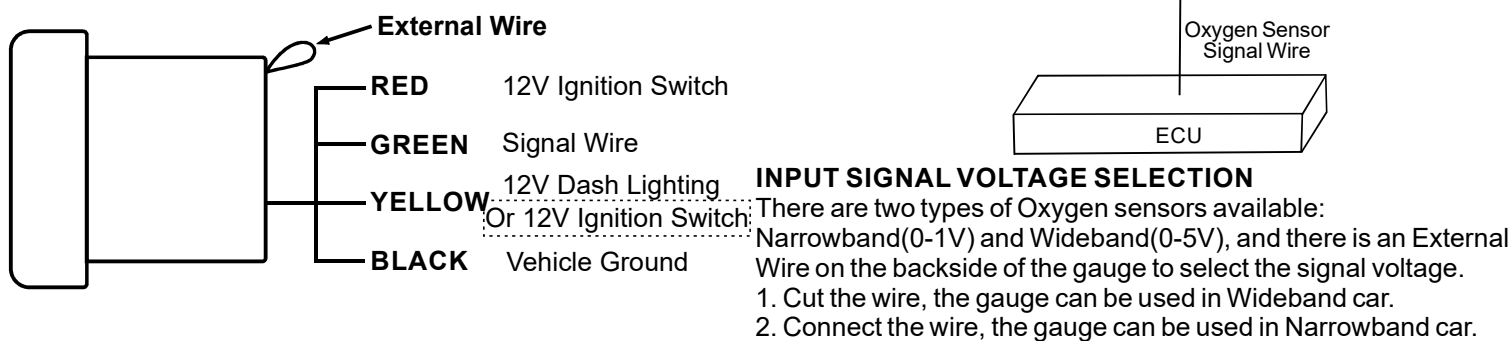

## TACHOMETER

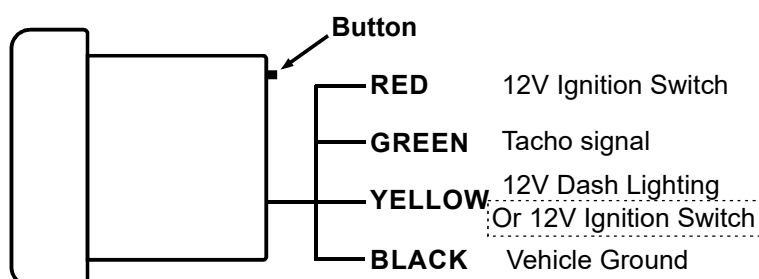

On standard Ignitions, signal green wire attaches to coil negative(-).

On electronic Ignitions, such as GM HEI, CRANE or MSD, attach signal red wire to tach terminal.

### CYLINDERS SETTING

1. Press the SET button on the backside of the gauge, the needle will go to the integer number.
  2. Choose the right cylinders, and release the button.
- \*This gauge can be used in 1-10Cylinders car.