

## ADW300 Wireless Energy Meter



ADW300 wireless meter is mainly used to measure three-phase active power in low-voltage network.

### Product Functions

Function	Description
LCD display	8 digits
Measurement of Energy	kWh (positive and negative)
	kvarh (positive and negative)
	A, B, C phase positive kWh
Electrical parameters	U, I, P, Q, S, PF, Hz
Harmonic	2~31ST voltage and current harmonic
Key programming	4 keys to communication and set parameters
Temperature measurement	A, B, C, N four-way temperature measurement (optional T)
DI /DO	4DI/2DO(Selection of K)
Residual current	1-channel
Communication	WIFI communication(WIFI)
	RS485 (Optional: C)
	470MHz Wireless Transmission (Optional: LR)
	GPRS Communication (Optional: 4G)
	NB-IOT Communication (Optional: NB)

### Technical Parameter



Input voltage	Nominal voltage	3*220/380V,3*380V,3*57.7/100V,3*100V
	Frequency	50Hz-60Hz
	Consumption	<10VA or 2W ( A phase ) , <0.5VA ( B phase、C phase )
Input current	Maximum Current	6A
	Starting current	0.002A
	Consumption	<2VA
	Accuracy	Class 0.5S
	Temperature Accuracy	±2℃
Pulse	Width	80±20ms
	Constant	6400imp/kWh

### Working Environment

Temperature	Operating	-25℃~55℃
	Storing	-40℃~70℃
Humidity	≤95%(No condensation)	
Altitude	<2000m	


### Dimensions drawings

ADW300 Dimension Diagram

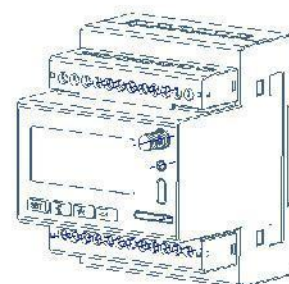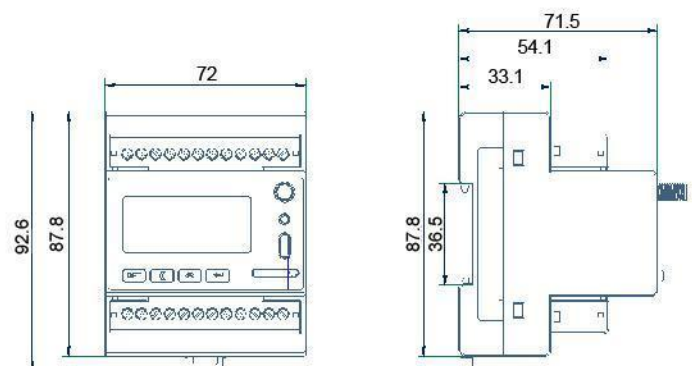


## Wiring


## ADW300W Wiring instructions

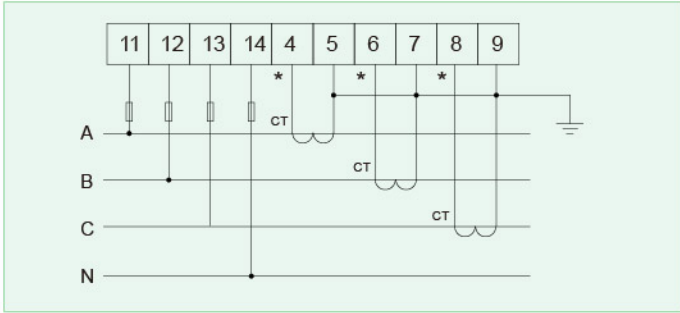


Three-phase four-wire

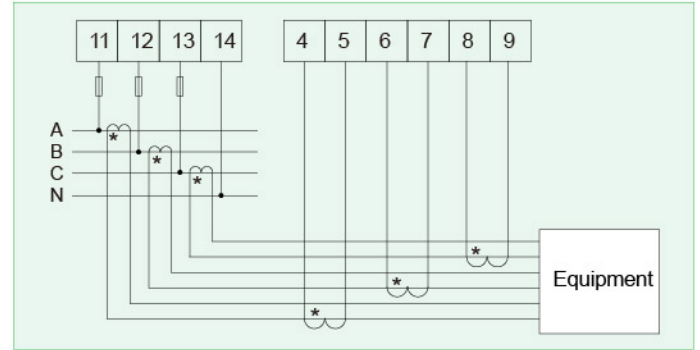


Three-phase four-wire

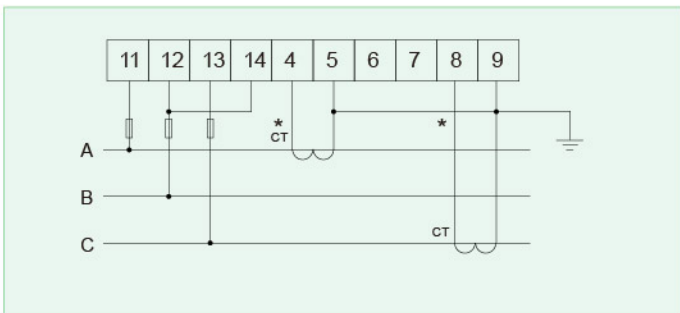


Three-phase three-wire

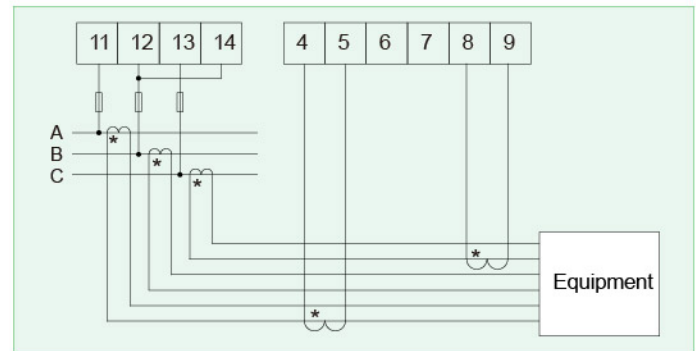

Three-phase three-wire

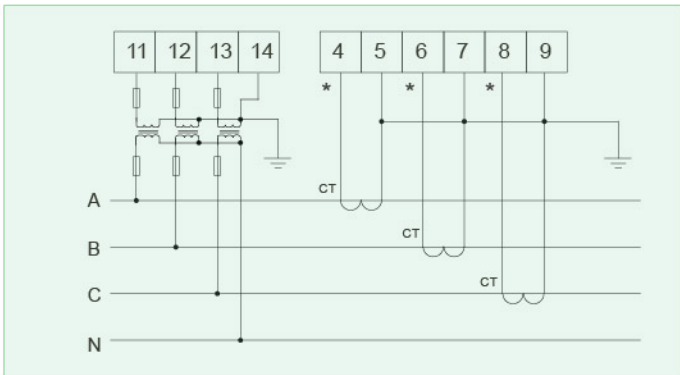

Three-phase four-wire  
Voltage access via PT

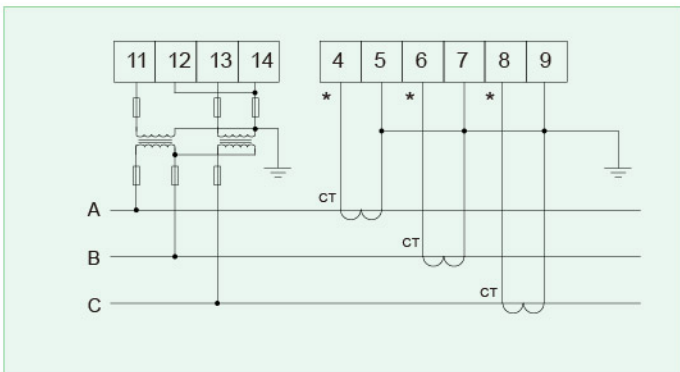

Three-phase three-wire

## Display examples

### Energy



### Voltage



### Current



### Power

